


MOUNTING INSTRUCTIONS / TEMPLATE

THE DRYER MUST BE PROPERLY EARTHED.
FOR FIXED INSTALLATION, CONNECT VIA CIRCUIT BREAKER.

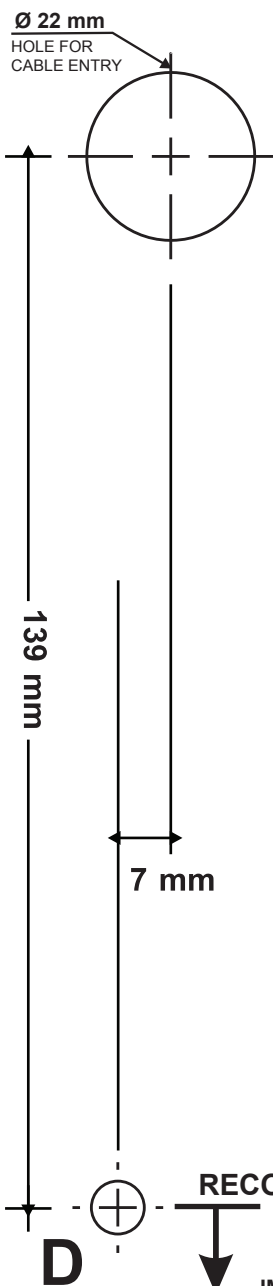

1 Attach this mounting instruction sheet / template to the wall with tape. Recommended installation height is 115 cm from the floor to holes C and D. Do not mount directly above sink or the like.

2 Drill 4 holes (A, B, C, D - 8 mm diameter, 35 mm deep).

3 Remove the mounting instruction sheet from the wall. Hammer the dowels supplied into the four holes.

4 Remove the housing from the base plate. Pull the power cord at least 7 cm through the hole in the base plate. Secure the base plate to the wall.

5 Place the power cord in the relief clamp and connect wires to L, N and ⊕ on the terminal block. **IMPORTANT:** Do not lift the dryer by the electrical parts.

6 Remount the housing onto the base plate and secure the housing properly. Test run the dryer.

RECOMMENDED INSTALLATION HEIGHT:
115 CM FROM THE FLOOR FOR ADULTS / 95 CM FOR CHILDREN AND THE DISABLED.

IMPORTANT! This product is covered by the WEEE regulations on the recycling and recovery of waste electrical and electronic equipment.

- This products is not to be treated as household refuse.
- This product must be recycled if possible.
- Contact local authorities for advice.
- The product may also be returned to the manufacturer/distributor free of charge. The manufacturer/distributor will ensure proper recycling/disposal.



232 mm

C

D

