

---

# CLEANING INSTRUCTIONS

## DAN DRYER® WARM-AIR HAND DRYERS TYPES AA/AE

---

To ensure a long and problem-free life cycle of a DAN DRYER® hand dryer, we recommend annual internal cleaning. Because of the unsurpassed quality of the dryer – maintenance-free bearings etc., a DAN DRYER only requires light cleaning.

Dust and dirt is removed with a soft brush, the fan wings are cleaned and sediments, if any, are removed. In this way, maximum performance of the fan and thus fast and efficient drying is ensured.

If such light servicing is carried out annually, this ensures a long, problem-free product life, often up to 15-20 years or more...

### PROCEDURE:

- Disconnect power supply.
- Remove housing using the special Allen key originally supplied with the dryer. If lost, a new one may be ordered from DAN DRYER A/S.
- Disassemble heating element by gently and at a slight angle (shown with a red arrow in Fig. 1) inserting the tip of a small screwdriver to loosen the front catch lock of the heating element holder (shown with a green arrow in Fig. 1) – while tilting the heating element holder in the direction shown by the blue arrow in Fig. 1. Be careful not to damage the two catch locks of the heating element.
- Clean fan wings with a small brush or carefully with a screwdriver. Loose dust may be removed with a vacuum cleaner or with compressed air if available.
- Clean all other components with a brush.
- Place rear catch lock correctly on the fan housing and reassemble heating element holder by ensuring that the front catch lock is clicked back in place on the fan housing (shown with a red arrow in Fig. 2). Take good care that wires are placed correctly in the protective hole in the heating element holder.
- Remount housing and tighten housing screws.
- Reconnect power supply and test run dryer.

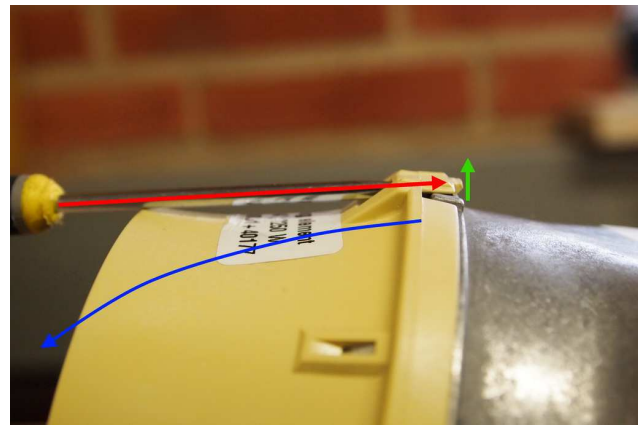


Fig. 1



Fig. 2