


INSTALLATION GUIDE

HEPA filter, 67020/67021 for
DAN DRYER LOKI hand dryer

Introduction:

This guide shows how to properly install a DAN DRYER HEPA filter 67020/67021.

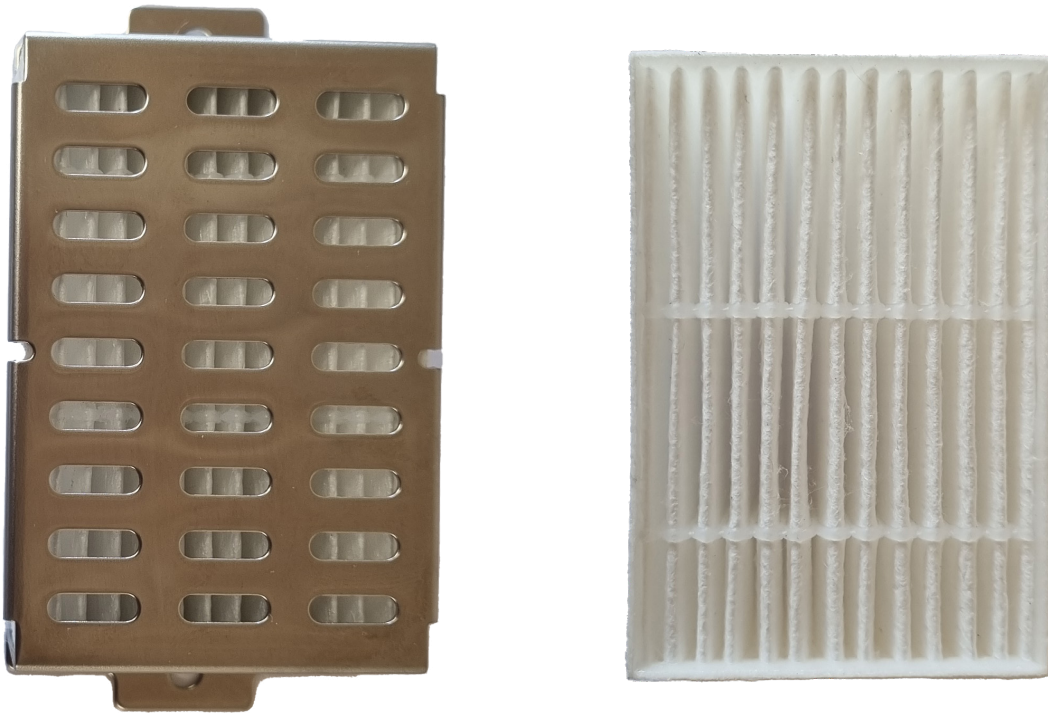

LOKI



1. Locate the mounting holes on the foot of the dryer. Remove existing filter holder, if any, before the new unit can be installed.

2. Place the filter unit on the holes over the air inlet.



3. Fit and fully tighten the security screws on both sides.

4. Installation/replacement of the filter is now complete.